
BYN149_KING BED INSTRUCTION SHEET 1/3

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

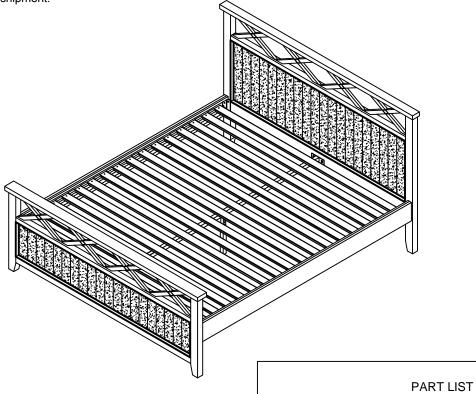


| HARDWARE LIST | | | | |
|---------------|-------------|-----------------|-----|--|
| NO | DESCRIPTION | | QTY | |
| А | | BOLT M10 X 30 | 12 | |
| В | 0 | WASHER M10 | 12 | |
| С | | 17mm HEX WRENCH | 1 | |
| D | Crumo. | SCREW M4 X 30 | 32 | |
| E | | BOLT M8-20 | 1 | |
| F | | BOLT M8-40 | 1 | |
| G | | NUT M8 | 1 | |
| Н | | 13mm HEX WRENCH | 1 | |
| I | | SPRING WASHER | 12 | |

| NO | DESCRIPTION | | QTY | |
|----|-------------|------------------------|-----|--|
| 1 | | HEADBOARD | 1 | |
| 2 | | FOOTBOARD | 1 | |
| 3 | | SIDE RAIL | 2 | |
| 4 | | CENTER SUPPORT RAIL | 1 | |
| 5 | | SLAT | 16 | |

BYN149_KING BED INSTRUCTION SHEET 2/3

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

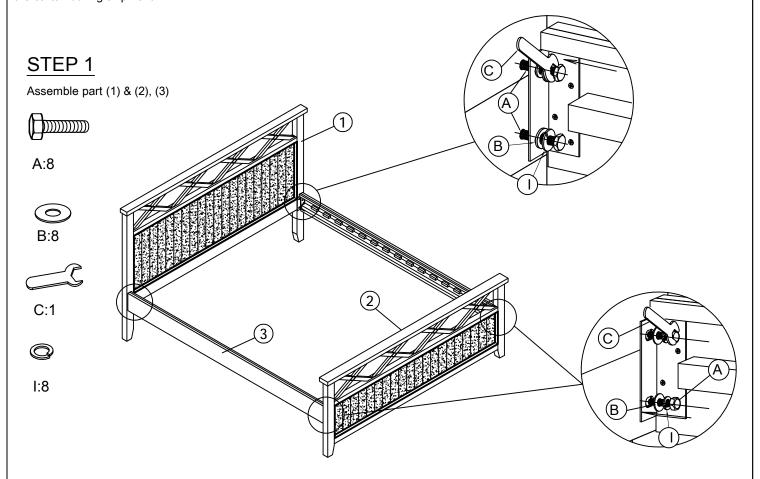

STEP 2

Assemble part (4)



E:1




F:1




G:1



H:1

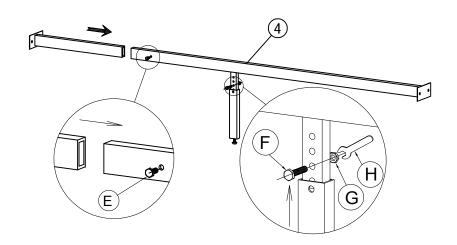

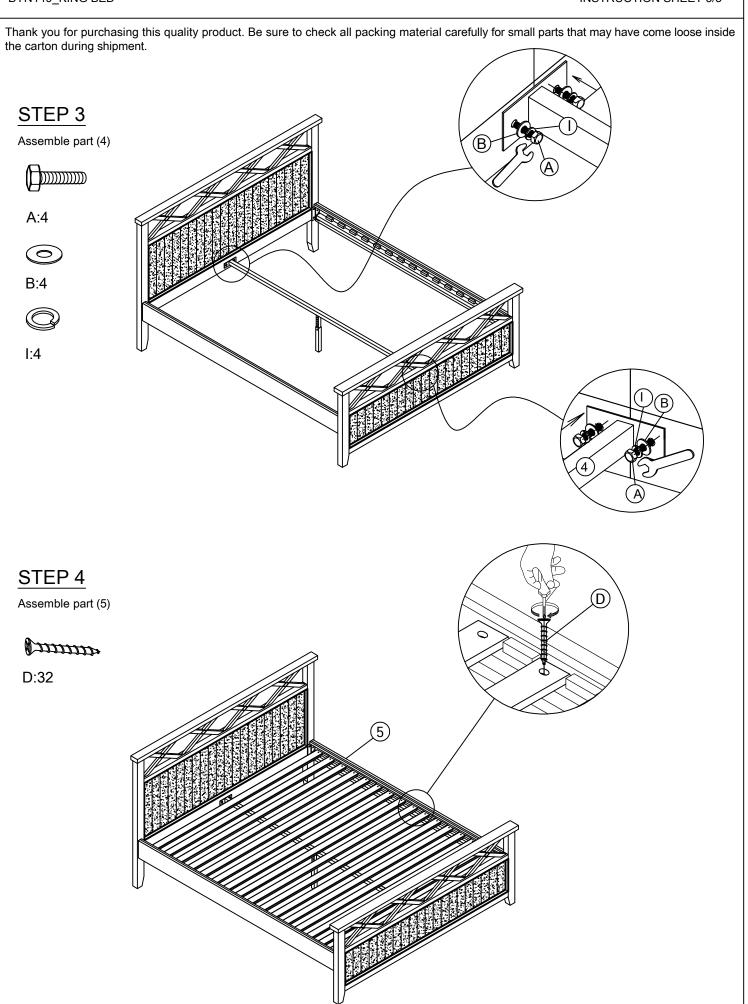

MADE IN VIETNAM